

Radio Communications Host Types

Scan a bar code below to choose how the scanner connects to a remote device. Scan **CRADLE HOST** if connecting to the CR0078 cradle. Refer to the *Product Reference Guide* for detailed information.



CRADLE HOST



HID PROFILE (SLAVE)



SERIAL PORT PROFILE (SLAVE)



SERIAL PORT PROFILE (MASTER)

Unpairing/Disconnection



UNPAIR/DISCONNECT